


CAMLOK


SUPPORTS

INSTALLATION

MEDIUM DUTY HYDRO CAMLOK PROP

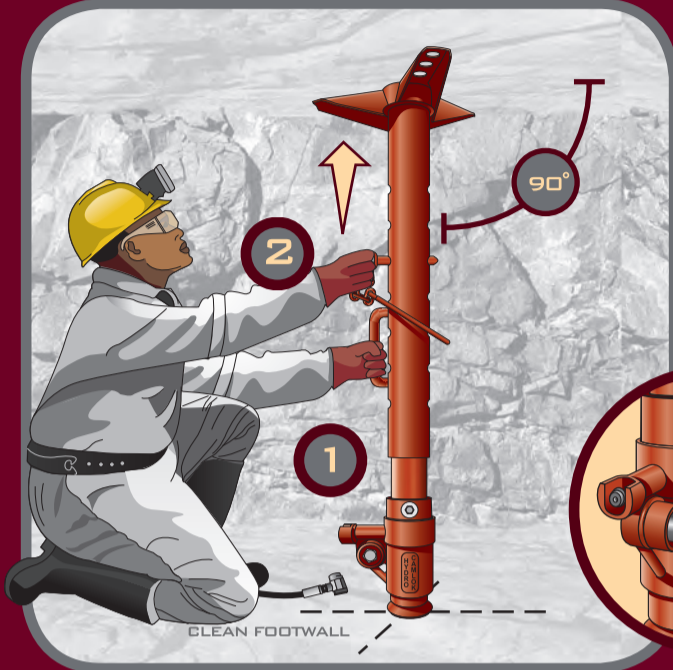

- 1 Position HYDRO CAMLOK PROP with NOZZLE pointing in DIRECTION of REMOTE RELEASE
- 2 Lift OUTER TUBE to HANGING WALL. Insert ADJUSTING PIN into LOWEST POSSIBLE HOLE ensuring ADJUSTING PIN EXTRACTS in DIRECTION of REMOTE RELEASE

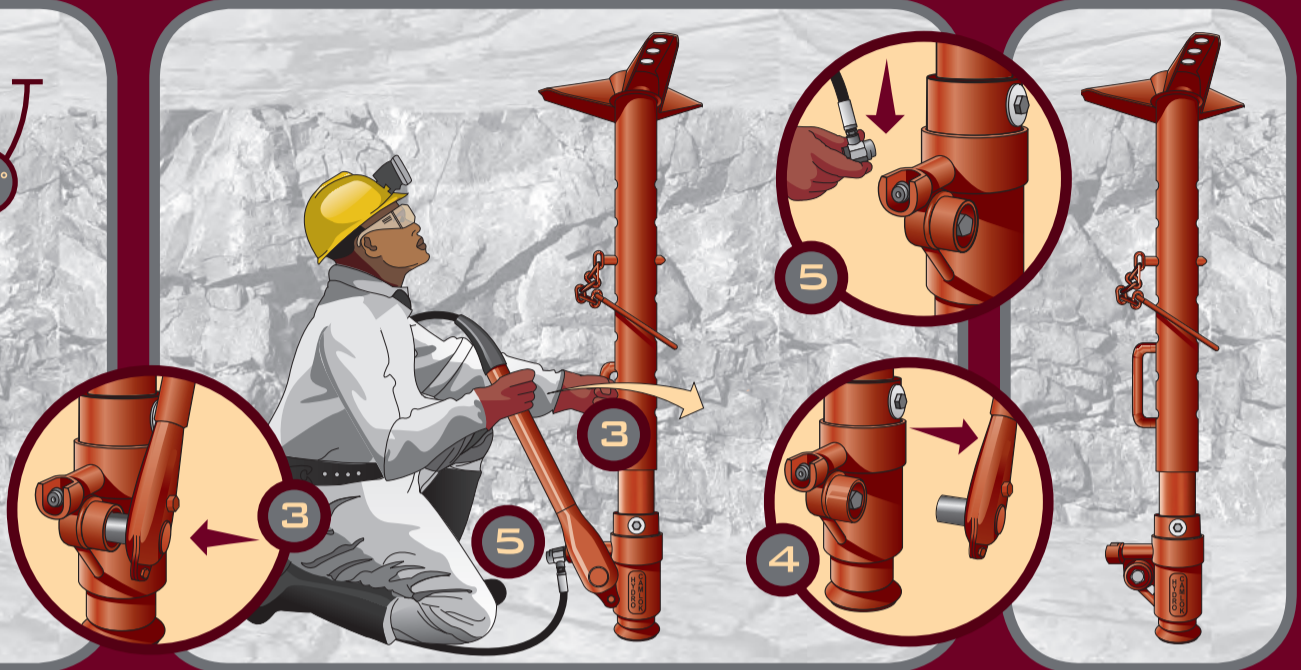


- 3 ATTACH SAFETY SPANNER TO VALVE and PUSH TO CLOSE
- 4 REMOVE SAFETY SPANNER from HYDRO CAMLOK PROP
- 5 Attach Hydraulic Pump HOSE COUPLING to HYDRO CAMLOK PROP NOZZLE. PRESSURIZE HYDRO CAMLOK PROP sufficiently to STAND UNAIDED. From a SAFE POSITION REMOTELY PRE-LOAD to 12mpa (Refer to relevant pump instruction manual)
- 6 Remove Hydraulic Pump HOSE COUPLING from installed HYDRO CAMLOK PROP


REMOVAL



- 1 Attach SAFETY SPANNER to valve on HYDRO CAMLOK PROP at 45° AWAY from RELEASE POSITION
- 2 Attach SAFETY SPANNER HOOK to ADJUSTING PIN CHAIN

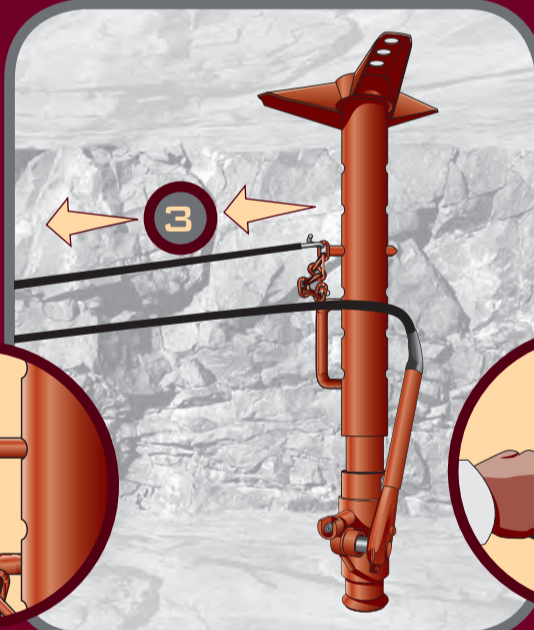

- 3 Move to a SAFE SUPPORTED position. Ensure release cable forms a STRAIGHT LINE between operator and SAFETY SPANNER

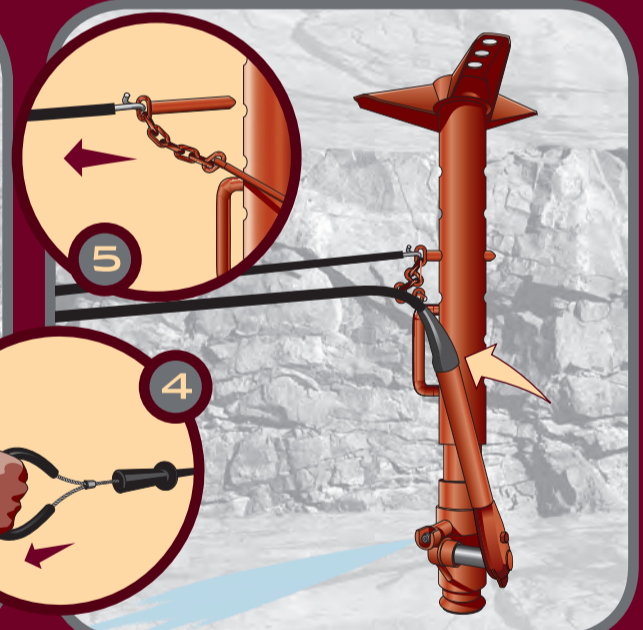

- 4 Grip SAFETY SPANNER HANDLE and PULL to RELEASE HYDRO CAMLOK PROP
- 5 Adjusting Pin will extract simultaneously
- 6 Pull HYDRO CAMLOK PROP to SUPPORTED area

CORROSION INDICATOR



- Disintegration of washer indicates EXTENSIVE CORROSION of HYDRO CAMLOK PROP
- Refer to RISK ASSESSMENT when assessing corrosion of HYDRO CAMLOK PROP

PATENTED

NB • ENSURE EQUIPMENT FUNCTIONS CORRECTLY

- IF HYDRO CAMLOK PROP DOES NOT REMOTE RELEASE, EXAMINE AREA FOR POTENTIAL HANGING WALL FAILURE. DO NOT ATTEMPT TO REMOVE HYDRO CAMLOK PROP OR RE-ENTER AREA PRIOR TO RE-ASSESSING AND MAKING SAFE
- HYDRO CAMLOK PROP MAY ONLY BE REMOTELY RELEASED FROM A SAFE DISTANCE

| SIZE | LENGTH | |
|------|--------|------|
| | MIN | MAX |
| MH1 | 800 | 1150 |
| MH2 | 950 | 1450 |
| MH3 | 1050 | 1600 |
| MH3A | 1150 | 1800 |
| MH4 | 1400 | 2250 |
| MH5 | 1650 | 2700 |

PROPS
(P T Y) L T D