


CAMLOK


S U P P O R T S

HEAVY DUTY SAFETY CAMLOK PROP


INSTALLATION

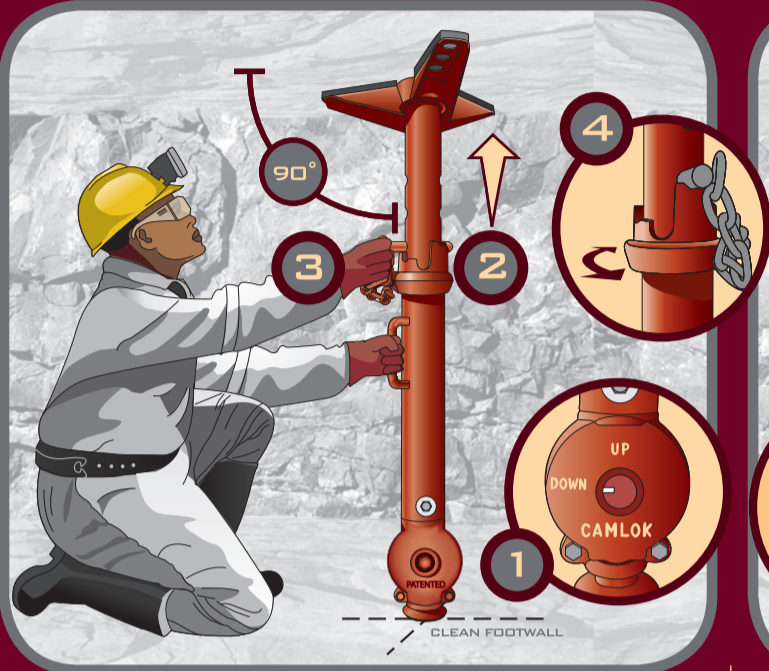

- 1 Rotate Cam INDICATOR to DOWN position
- 2 Lift INNER TUBE to HANGING WALL
- 3 Insert ADJUSTING PIN into LOWEST POSSIBLE HOLE
- 4 ROTATE ADJUSTING COLLAR and position head as CLOSE TO HANGING WALL AS POSSIBLE

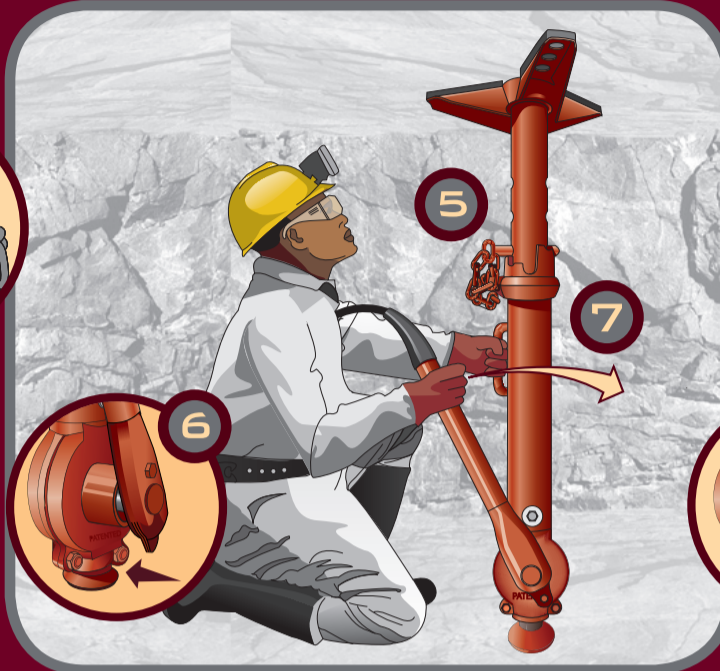


- 5 Ensure ADJUSTING PIN EXTRACTS IN DIRECTION OF REMOTE RELEASE
- 6 Attach SAFETY SPANNER to SHAFT on CAMLOK PROP
- 7 Push SAFETY SPANNER forward to PRE-STRESS CAMLOK PROP

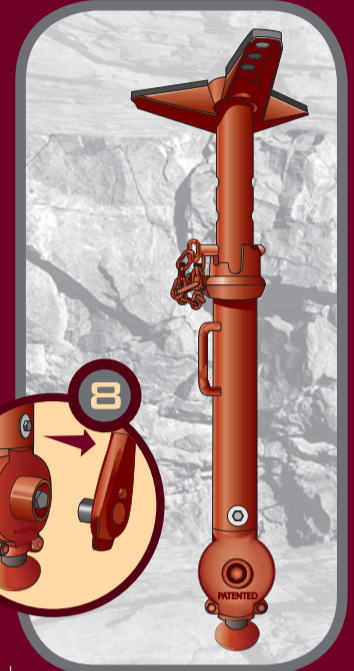


- 8 REMOVE SAFETY SPANNER


REMOVAL

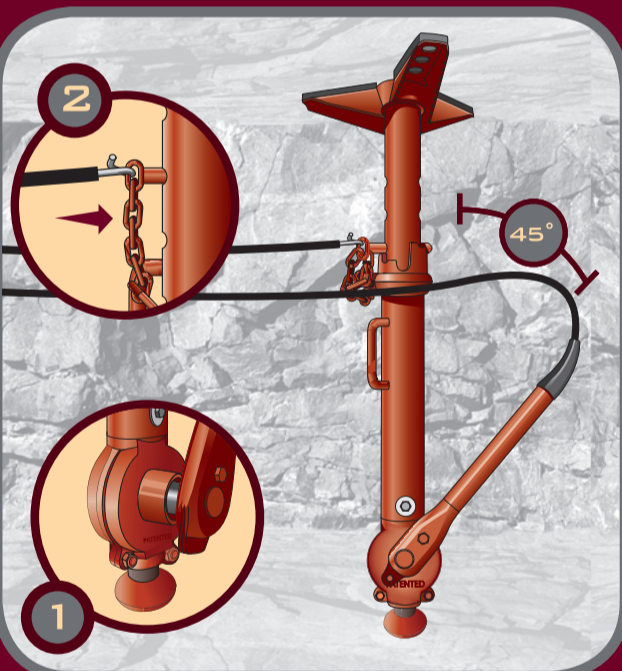

- 1 Attach SAFETY SPANNER to SHAFT on CAMLOK PROP at 45° AWAY FROM RELEASE POSITION
- 2 Attach SAFETY SPANNER HOOK to ADJUSTING PIN CHAIN

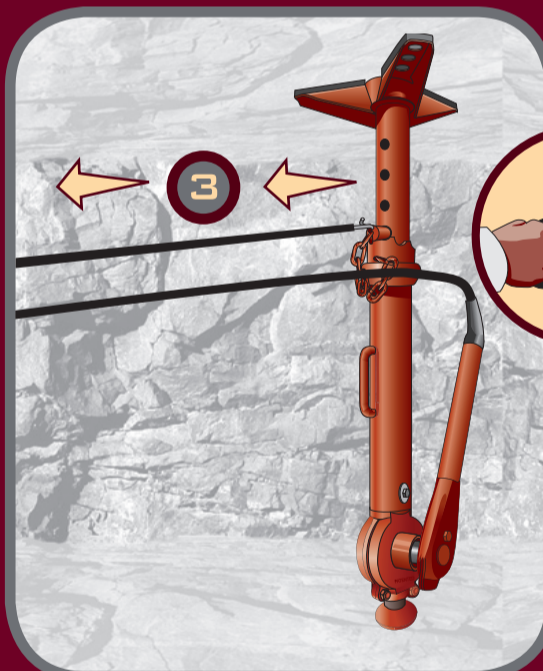


- 3 Move to a SAFE SUPPORTED position Ensure RELEASE CABLE forms a STRAIGHT LINE between operator and SAFETY SPANNER

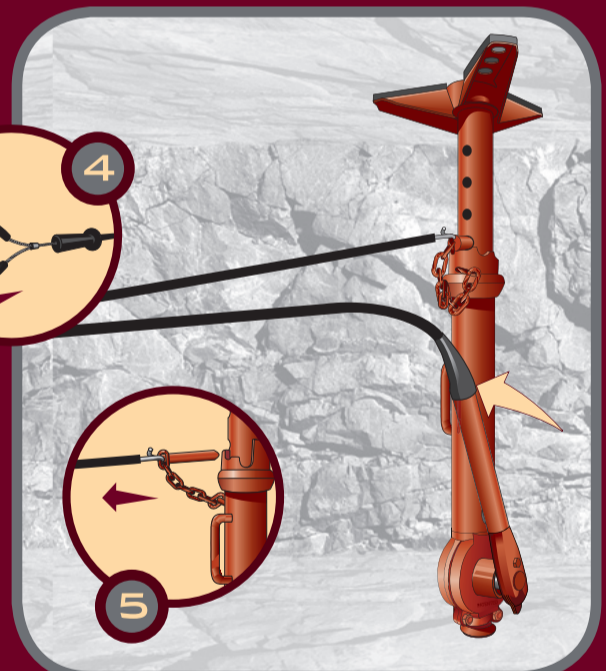

- 4 Grip SAFETY SPANNER HANDLE and PULL to RELEASE CAMLOK PROP
- 5 Adjusting Pin will extract simultaneously
- 6 Pull CAMLOK PROP to SUPPORTED area

CORROSION INDICATOR

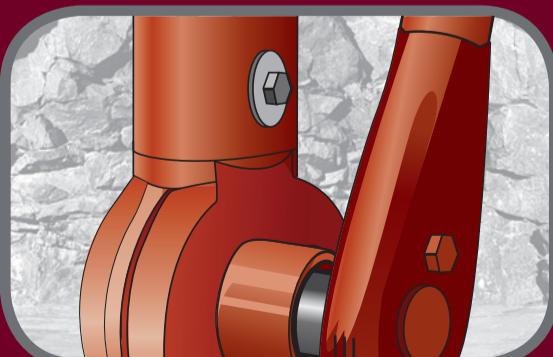

- Disintegration of washer indicates EXTENSIVE CORROSION of CAMLOK PROP
- Refer to RISK ASSESSMENT when assessing corrosion of CAMLOK PROP

PATENTED

- NB • ENSURE EQUIPMENT FUNCTIONS CORRECTLY
- IF CAMLOK PROP DOES NOT REMOTE RELEASE, EXAMINE AREA FOR POTENTIAL HANGING WALL FAILURE DO NOT ATTEMPT TO REMOVE CAMLOK PROP OR RE-ENTER AREA PRIOR TO RE-ASSESSING AND MAKING SAFE
 - CAMLOK PROP MAY ONLY BE REMOTELY RELEASED FROM A SAFE DISTANCE

SIZE	LENGTH	
	MIN	MAX
H1	800	1100
H2	950	1400
H3	1050	1600
H4	1400	2250
H5	1700	2700

PROPS
(P T Y) L T D