


CAMLOK

SUPPORTS

YIELDING SAFETY CAMLOK PROP


INSTALLATION

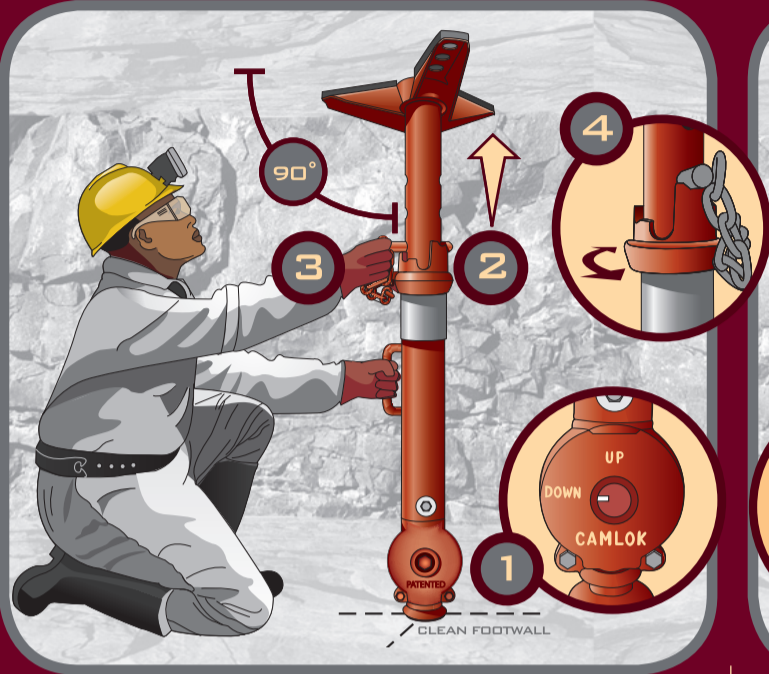

- 1 Rotate Cam INDICATOR to DOWN position
- 2 Lift INNER TUBE to HANGING WALL
- 3 Insert ADJUSTING PIN into LOWEST POSSIBLE HOLE
- 4 ROTATE ADJUSTING COLLAR and position head as CLOSE TO HANGING WALL AS POSSIBLE




- 5 Ensure ADJUSTING PIN EXTRACTS IN DIRECTION OF REMOTE RELEASE
- 6 Attach SAFETY SPANNER to SHAFT on CAMLOK PROP
- 7 Push SAFETY SPANNER forward to PRE-STRESS CAMLOK PROP

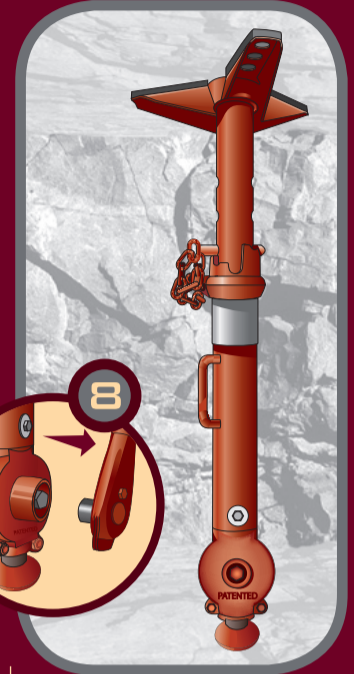


- 8 REMOVE SAFETY SPANNER


REMOVAL

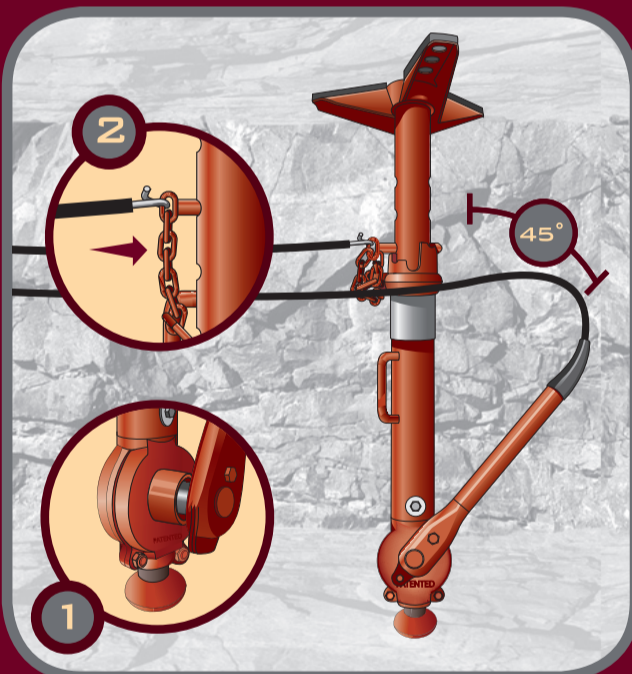

- 1 Attach SAFETY SPANNER to SHAFT on CAMLOK PROP at 45° AWAY FROM RELEASE POSITION
- 2 Attach SAFETY SPANNER HOOK to ADJUSTING PIN CHAIN

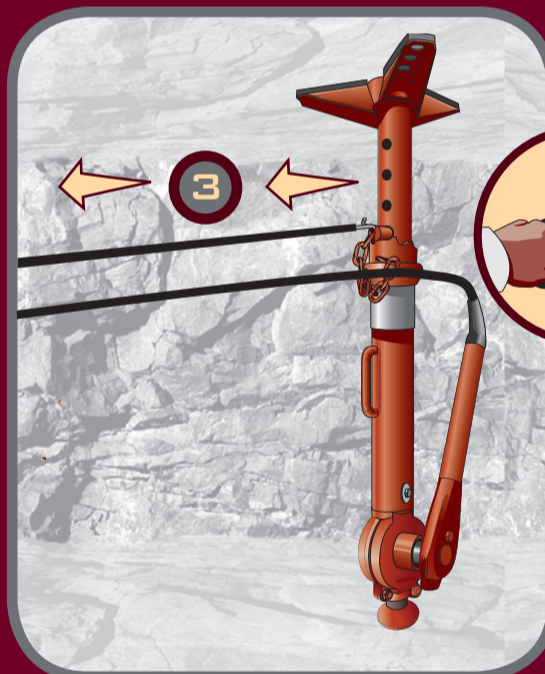


- 3 Move to a SAFE SUPPORTED position Ensure RELEASE CABLE forms a STRAIGHT LINE between operator and SAFETY SPANNER

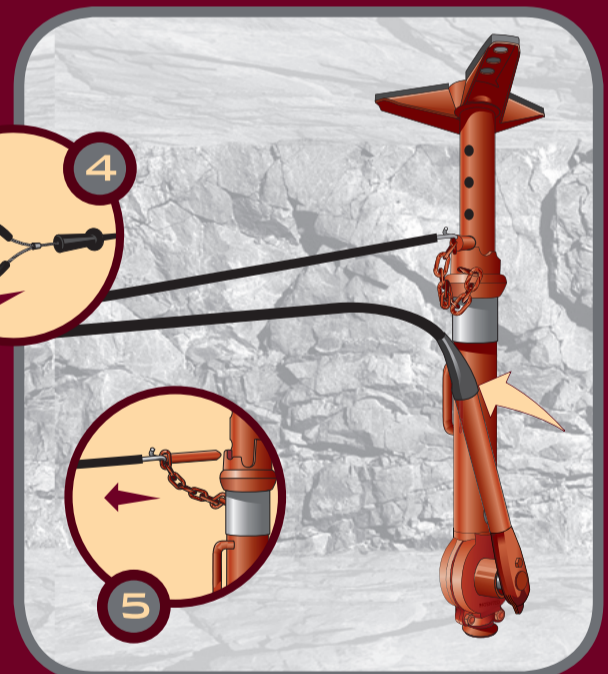

- 4 Grip SAFETY SPANNER HANDLE and PULL to RELEASE CAMLOK PROP
- 5 Adjusting Pin will extract simultaneously
- 6 Pull CAMLOK PROP to SUPPORTED area

CORROSION INDICATOR

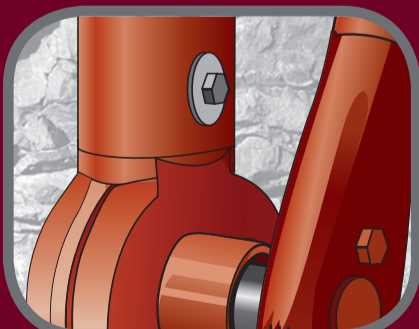

- Disintegration of washer indicates CORROSION of CAMLOK PROP
- Refer to RISK ASSESSMENT when assessing corrosion of CAMLOK PROP

YIELDING UNIT



- UNSCORED PORTION X indicates AVAILABLE YIELD. If insufficient, fit replacement yield unit

- NB • ENSURE EQUIPMENT FUNCTIONS CORRECTLY
- IF CAMLOK PROP DOES NOT REMOTE RELEASE, EXAMINE AREA FOR POTENTIAL HANGING WALL FAILURE DO NOT ATTEMPT TO REMOVE YIELDING CAMLOK PROP OR RE-ENTER AREA PRIOR TO RE-ASSESSING AND MAKING SAFE
 - CAMLOK PROP MAY ONLY BE REMOTE RELEASED FROM A SAFE DISTANCE

SIZE	LENGTH	
	MIN	MAX
Y1	900	1100
Y2	1050	1400
Y3	1150	1600
Y4	1500	2200
Y5	1800	2700

PROPS
(P T Y) L T D