
CFINLOH

SUPPORTS

INSTALLATION

CAMLOK CANOPY

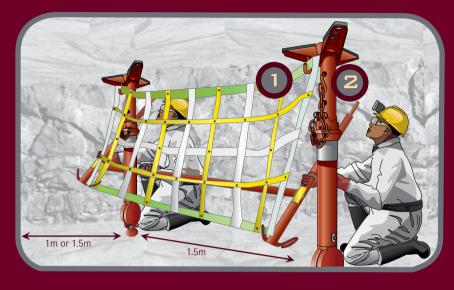





INSTALL CAMLOK PROPS MAX 1.5M APART CENTRE TO CENTRE AND MIN 1.5M OR 1.0M FROM FACE DEPENDENT ON CANOPY SIZE


PLACE CAMLOK CANOPY ARMS, BRACE & NET ON FOOTWALL ACCESSIBLE TO INSTALLERS

- 1 HANG NET ON BOTH CAMLOK PROPS HEADBOARD HOOKS
- 2 HANG CANOPY ARMS BY CHAIN HOOKS ON HIGHEST ADJUSTMENT HOLE ON CAMLOK PROPS
- 3 FROM SAFE POSITION, ATTACH OPPOSITE CORNERS OF NET TO SUPPORT ARM HOOKS

4 POSITION CANOPY BRACE BETWEEN CANOPY ARMS AND CONNECT U-BRACKETS ON BRACE WITHIN CONTAINMENT BRACKETS ON ARMS IN POSITION OF YELLOW REFLECTIVE MARKERS

TENSION BRACE FIRMLY BETWEEN ARMS BY ROTATING NUT

INSTALLATION

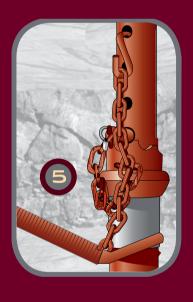






- 5 EXTEND CANOPY ARMS FORWARD SIMULTANEOUSLY AND LOCATE V- BRACKETS ON CAMLOK PROPS
- 6 TENSION ARMS TO HANGING WALL BY ROTATING NUTS UNTIL FIRMLY TENSIONED

CORROSION INDICATOR

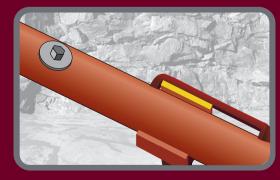

- LOSS OF DISK THROUGH CORROSION INDICATES EXTENSIVE CORROSION TO CANOPY
- REFER TO RISK ASSESSMENT WHEN ASSESSING DAMAGE OR CORROSION TO CANOPY

- NB 2 INSTALLERS RECOMMENDED FOR INSTALLATION OF CAMLOK CANOPY
 - IF CANOPY CONTAINS FOG OR SUSPECTED FOG, EXERCISE EXTREME CAUTION AND DO NOT REMOVE CANOPY UNTIL ADDITIONAL SUPPORT IS INSTALLED
 - IF REMOVAL OF CANOPY IS CONSIDERED HAZARDOUS, SACRIFICING EQUIPMENT AND BARRICADING OFF AREA IS RECOMMENDED
 - FOG CAPACITY OF 450KG

